



R244 PARTS LIST

EXTREME RENTALS

sizes 5-12

Distributor Prices

  2/98

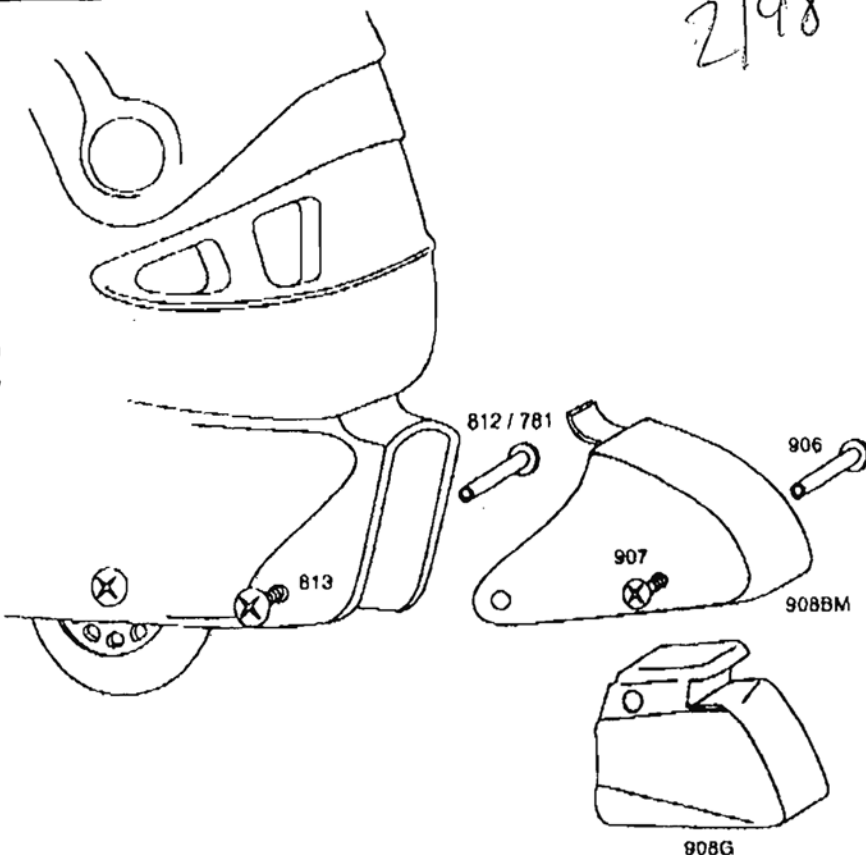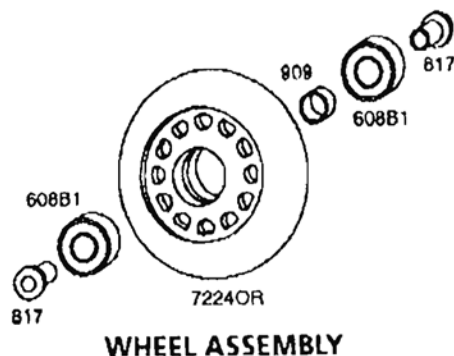

pacers

ALL PARTS ORDERS MUST BE FAXED OR MAILED. NO PHONE ORDERS WILL BE ACCEPTED.

Part#	Description	Cost
812	Female Axle 35mm	
781	Female Axle 41mm (Rear/Right)	
813	Male Axle Screw	
906	Female Heel Stop Screw 41mm	
907	Male Heel Stop Screw	
608B1	Bearing - ABEC 1	
7224OR	Urethane Wheel	
909	Bearing Spacer	
794	M/F Att Screws	

Part#	Description	Cost
908G	Heel Stop - Gray	
817	Axle Insert	
908BM	Heel Stop Holder	
2244	Liners (PR) please specify shoe size	
3244L	Strap / Lever Left	
3244R	Strap / Lever Right	
3344BL	Clip / Mid & Bottom Left	
3344BR	Clip / Mid & Bottom Right	
3344T	Clip / Top	
3244B	Strap / Mid & Bottom	

* To reduce the risk of injury • wear a helmet, wrist, knee and elbow guards while skating.
* Skate on a smooth, flat surface, where there is no automobile traffic.

1. Check the axle screws on each wheel. The male and female should be tightened firmly prior to each use.
2. Check heel stop screw before skating. The male and female should be tightened firmly. If heel stop shows substantial wear, it should be replaced.

1. Sur chaque roue, vérifiez les vis de l'essieu. Les vis mâles et femelles doivent être serrées fermement avant l'utilisation des patins.
2. Vérifiez les vis du frein avant l'utilisation des patins. Les vis mâles et femelles doivent être serrées fermement. Si le frein arrière montre des signes apparents d'usure. Veuillez le remplacer.

1. Prüfen sie die schrauben aller rollen, schraube und mutter vor gebrauch gut festdrehen.
2. Prüfen sie die schraube beim stopper bevor sie fahren. Schraube und mutter gut befestigen. Ersetzen sie den stopper, wenn er abgenutzt ist.

1. Cheque los tornillos de cada rueda, macho y hembra de los tornillos deberan apretarse antes de cada uso.
2. Cheque todos los tornillos del freno para asegurarse que esten bien apretados. Si nota que la goma del freno esta gastada, esta debera ser reemplazada por una nueva