 



R243 PARTS LIST

EXTREME RENTALS

youth sizes 13-4
Distributor Prices

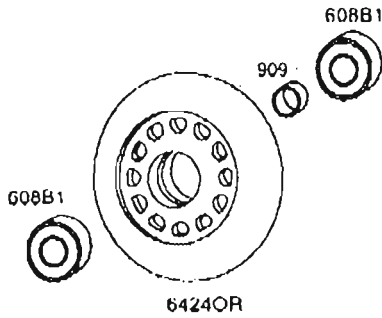

 WHEEL ASSEMBLY

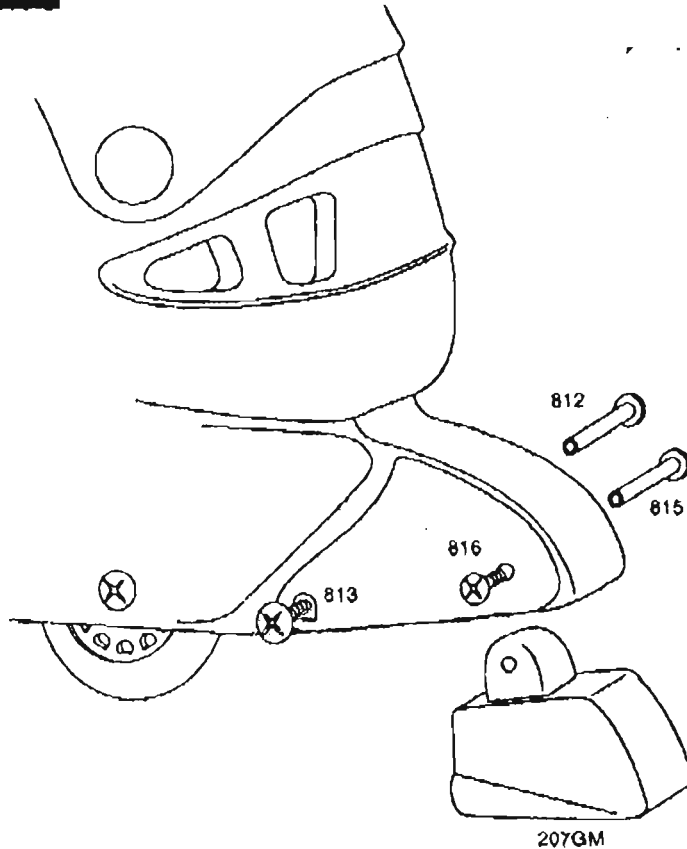

ALL PARTS ORDERS MUST BE FAXED OR MAILED. NO PHONE ORDERS WILL BE ACCEPTED.

| Part# | Description | Cost |
|--------|------------------------|------|
| 812 | Female Axle 35mm | |
| 813 | Male Axle | |
| 815 | Female Heel Stop Screw | |
| 816 | male Heel Stop Screw | |
| 909 | Bearing Spacer | |
| 608B1 | Bearing-ABEC 1 | |
| 207GM | heel Stop - Gray | |
| 6424OR | Urethane Wheel | |

| Part# | Description | Cost |
|--------|---------------------------|------|
| 2243 | Liners (PR) specify size | |
| 794 | M/F Att. Screws | |
| 3244L | Strap / Lever Left | |
| 3244R | Strap / Lever Right | |
| 3344T | Clip / Top | |
| 3344BL | Clip / Top | |
| 3344BR | Clip / Mid & Bottom Right | |
| 3244B | Strap / Mid & Bottom Left | |

* To reduce the risk of injury - wear a helmet, wrist, knee and elbow guards while skating.
* Skate on a smooth, flat surface, where there is no automobile traffic.

1. Check the axle screws on each wheel. The male and female should be tightened firmly prior to each use.
2. Check heel stop screw before skating. The male and female should be tightened firmly. If heel stop shows substantial wear, it should be replaced.

1. Prüfen sie die schrauben aller rollen, schraube und mutter vor gebrauch gut festdrehen.
2. Prüfen sie die schraube beim stopper bevor sie fahren. Schraube und mutter gut befestigen. Ersetzen sie den stopper, wenn er abgenutzt ist.

1. Sur chaque roue, vérifiez les vis de l'essieu. Les vis males et femelles doivent être serrées fermement avant l'utilisation des patins.
2. Vérifiez les vis du frein avant l'utilisation des patins. Les vis males et femelles doivent être serrées fermement. Si le frein arrière montre des signes apparents d'usure. Veuillez le remplacer.

1. Cheque los tornillos de cada rueda, macho y hembra de los tornillos deberan apretarse antes de cada uso.
2. Cheque todos los tornillos del freno para asegurarse que esten bien apretados. Si nota que la goma del freno esta gastada, esta debera ser reemplazada por una nueva