


I-122 PARTS LIST

RTX 200

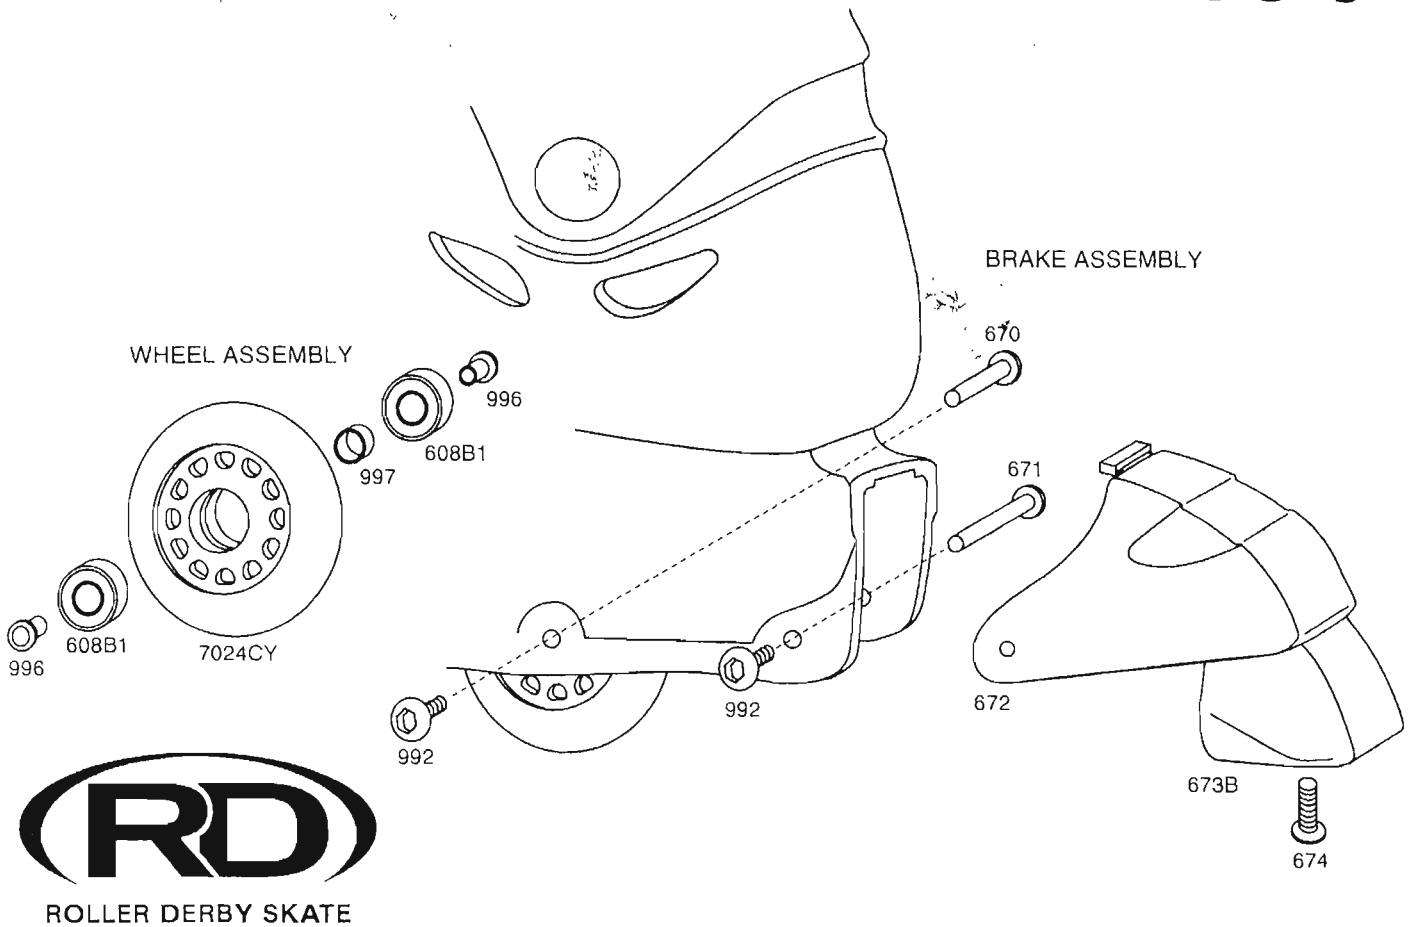

ALL PARTS ORDERS MUST BE FAXED OR MAILED. NO PHONE ORDERS WILL BE ACCEPTED.

Part#	Description	Cost
670	39mm Female Axle	
671	45mm Female Axle	
992	13mm Male Axle Screw	
672	Heel Stop Bracket	
673B	Heel Stop	

Part#	Description	Cost
608B1	Bearing - ABEC- 1	
7024CY	Wheel - 70 x 24 CLR/VEL	
996	Bearing Alignment Insert	
997	Bearing Spacer	
674	28mm Heel Stop Screw	

1. Check the axle screws on each wheel. The male and female should be tightened firmly prior to each use.
2. Check heel stop screw before skating. The male and female should be tightened firmly. If heel stop shows substantial wear, it should be replaced.

1. Sur chaque roue, vérifiez les vis de l'essieu. Les vis males et femelles doivent être serrées fermement avant l'utilisation des patins.
2. Vérifiez les vis du frein avant l'utilisation des patins. Les vis males et femelles doivent être serrées fermement. Si le frein arrière montre des signes apparents d'usure. Veuillez le remplacer.

1. Prüfen sie die schrauben aller rollen, schraube und mutter vor gebrauch gut festdrehen.
2. Prüfen sie die schraube beim stopper bevor sie fahren. Schraube und mutter gut befestigen. Ersetzen sie den stopper, wenn er abgenutzt ist.

1. Cheque los tornillos de cada rueda, macho y hembra de los tornillos deberan apretarse antes de cada uso.
2. Cheque todos los tornillos del freno para asegurarse que esten bien apretados. Si nota que la goma del freno esta gastada, esta debera ser reemplazada por una nueva