


# I-246 / I-346 PARTS LIST

# HYBRID G900

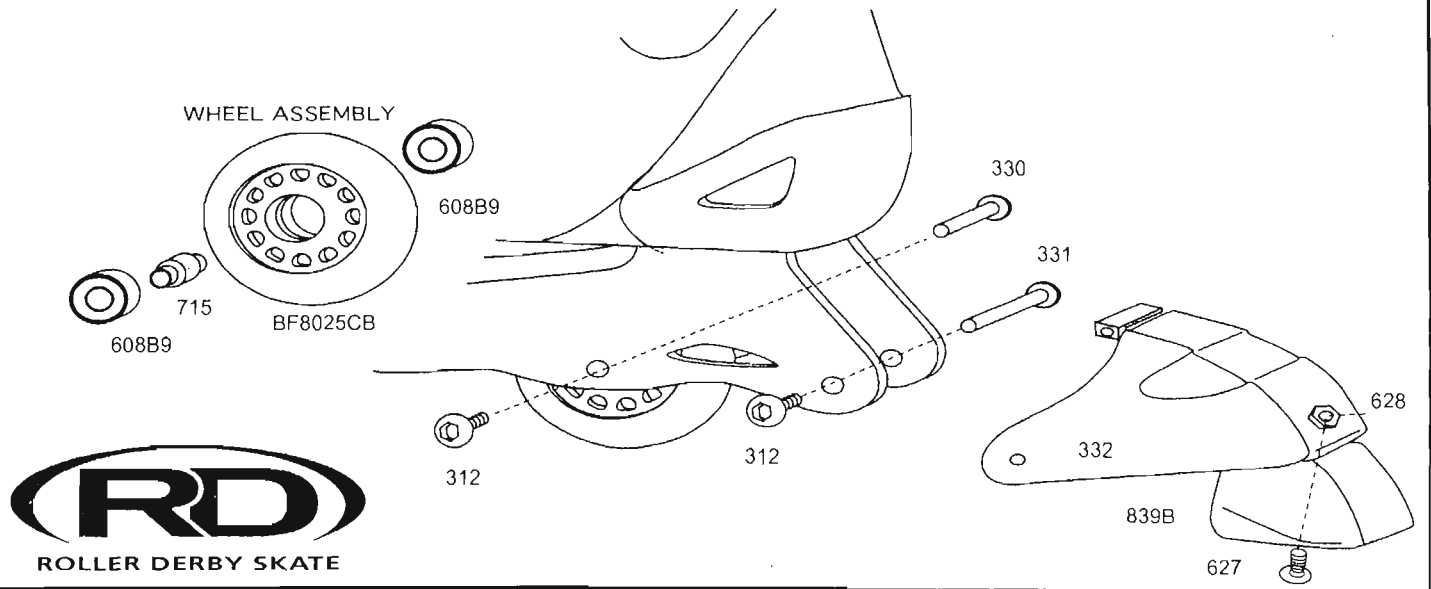

Part #	Description	Cost	Qty	Total	Part #	Description	Cost	Qty	Total
330	Female Axle 28mm				332	Heel Stop Bracket			
331	Female Axle 39mm (Brake)				839B	Heel Stop - Black			
312	Male Axle Screw 9mm				627	Heel Stop Screw 32mm			
715	Bearing Spacer				628	Heel Stop Locknut			
608B9	Bearing - ABEC 9				3346	Strap/Lever - Blue			
BF8025CB	Wheel - 80mm Clear/Black				3246	Clip - Black			

All orders must be paid by check, Visa, or Mastercard prior to shipment  
 All orders are required to be faxed or mailed with signature

CA residents add 8.25% tax  
 IL residents add 6.75% tax  
 PA residents add 6% tax

Subtotal	
Tax	
Shipping and Handling	
<b>TOTAL</b>	

Name: \_\_\_\_\_ Signature: \_\_\_\_\_ Phone: \_\_\_\_\_

Address: \_\_\_\_\_ City: \_\_\_\_\_ State: \_\_\_\_\_ Zip: \_\_\_\_\_

MC or Visa #: \_\_\_\_\_ Exp Date: \_\_\_\_\_

1. Check the axle screws on each wheel. The male and female should be tightened firmly prior to each use.
2. Check heel stop screw before skating. The male and female should be tightened firmly. If heel stop shows substantial wear, it should be replaced.

1. Prüfen sie die schrauben aller rollen, schraube und mutter vor gebrauch gut festdrehen.
2. Prüfen sie die schraube beim stopper bevor sie fahren. Schraube und mutter gut befestigen. Ersetzen sie den stopper, wenn er abgenutzt ist.

1. Sur chaque roue, vérifiez les vis de l'essieu. Les vis males et femelles doivent être serrées fermement avant l'utilisation des patins.
2. Vérifiez les vis du frein avant l'utilisation des patins. Les vis males et femelles doivent être serrées fermement. Si le frein arriere montre des signes apparents d'usure. Veuillez le remplacer.

1. Cheque los tornillos de cada rueda, macho y hembra de los tornillos deberan apretarse antes de cada uso.
2. Cheque todos los tornillos del freno para asegurarse que esten bien apretados. Si nota que la goma del freno esta gastada, esta debera ser reemplazada por una nueva